

How SRNE Battery connect with Deye Inverter

Setup by Mobile Phone


Step 2

Enable the BMS communication function and set the communication protocol on the deye inverter

Deye inverter battery setting

Bat Mode: Lithium

Lithium Mode: 12

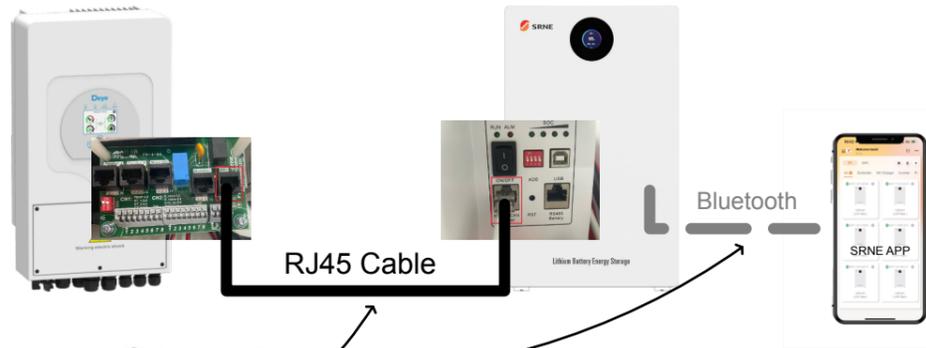


Step 1

Connecting the inverter to the battery and the battery to the mobile phone

Step 3

Modifying the battery communication protocol to deye on the SRNE APP

Password: 1357

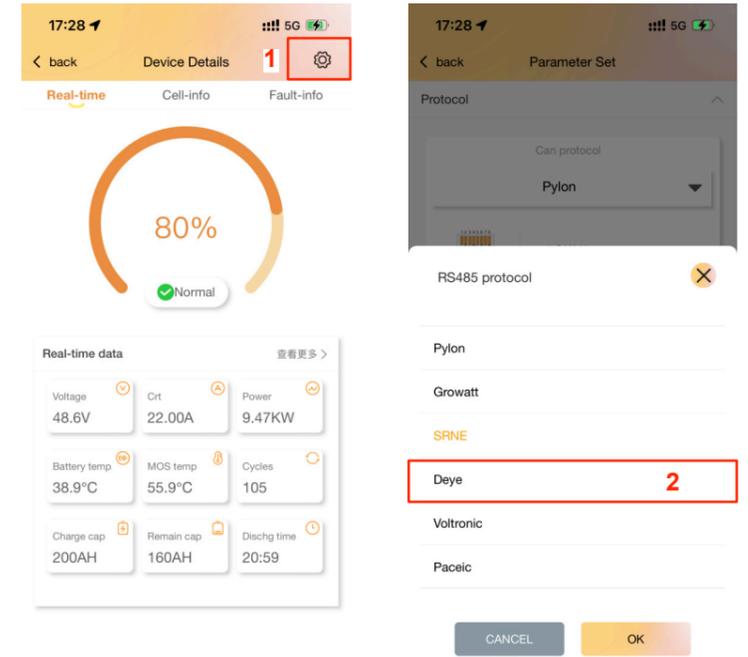

Setup by Laptop


Step 2

Enable the BMS communication function and set the communication protocol on the deye inverter

Deye inverter battery setting

Battery Mode: Lithium

Lithium Mode: 12

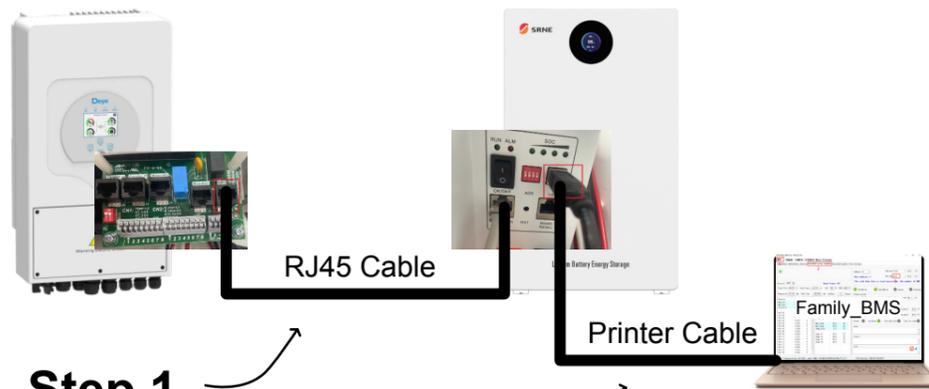

Step 1

Connecting the inverter to the battery and the battery to the laptop

Step 3

Modifying the battery communication protocol to deye on the laptop software Family_BMS

